 





DE AS-i Master CM 1243-2  
EN AS-i Master CM 1243-2  
FR Maître AS-i CM 1243-2

ES Maestro AS-i CM 1243-2  
IT Master AS-i CM 1243-2  
PT Master AS-i CM 1243-2

TR AS-i Master CM 1243-2  
PY Модуль CM 1243-2, мастер AS-i  
中文 AS-i 主机 CM 1243-2






|                             |    |
|-----------------------------|----|
| Betriebsanleitung           | DE |
| Operating Instructions      | EN |
| Instructions de service     | FR |
| Instructivo                 | ES |
| Istruzioni operative        | IT |
| Instruções de Serviço       | PT |
| İşletme Kılavuzu            | TR |
| Руководство по эксплуатации | PY |
| 使用说明                        | 中文 |

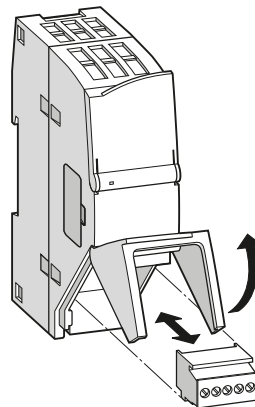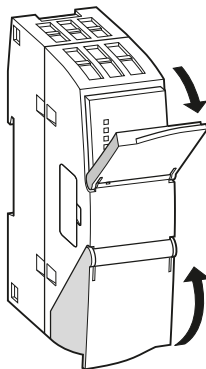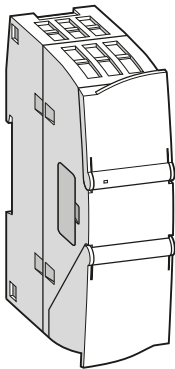

DE Maximalausbau  
EN Maximum configuration  
FR Configuration maximale

ES Configuración máxima  
IT Configurazione massima  
PT Expansão máxima


TR Maksimum konfigürasyon  
PY максимальная конфигурация  
中文 最大配置

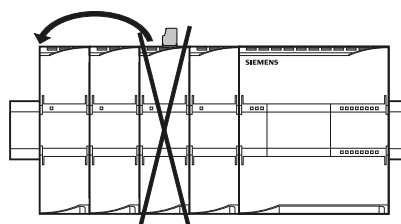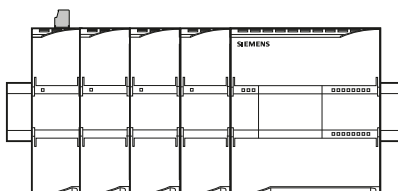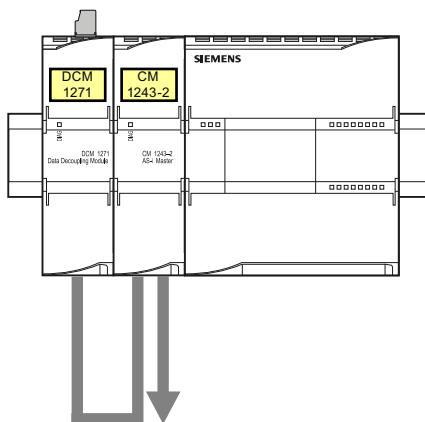


DE Montage  
EN Installation  
FR Montage

ES Montaje  
IT Montaggio  
PT Estrutura


TR Montaj  
PY МОНТАЖ  
中文 安装

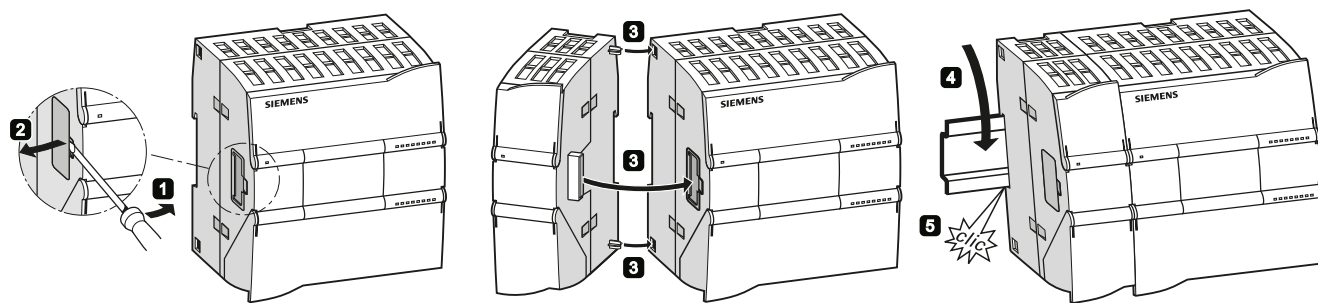

DE Anschluss  
EN Connection  
FR Raccordement  
ES Conexión  
IT Collegamento  
PT Conexão  
TR Klemens  
PY клемма  
中文 端子

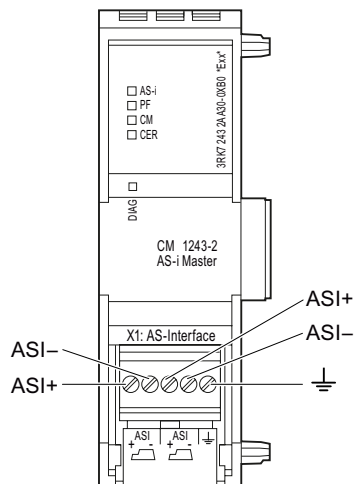

|     |          |
|-----|----------|
|     |          |
|     |          |
| AWG | 24 to 12 |

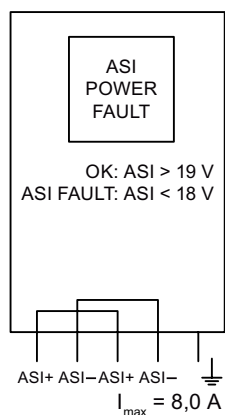

DE Maßbilder  
EN Dimension drawing  
FR Dessin coté  
ES Plano acotado  
IT Disegno dimensionale  
PT Esquema dimensional  
TR Ölçü çizimleri  
PY габаритные чертежи  
中文 尺寸图

