

SIMATIC NET

S7-1200 - PROFIBUS SIMATIC CM 1243-5

Operating Instructions

Preface

Application and properties

1

LEDs and connectors

2

Installation, connecting up, commissioning

3

Configuration and program blocks

4

Diagnostics and upkeep

5

Technical specifications

6

Dimension drawings

A

Approvals

B

References

C

Legal information

Warning notice system

This manual contains notices you have to observe in order to ensure your personal safety, as well as to prevent damage to property. The notices referring to your personal safety are highlighted in the manual by a safety alert symbol, notices referring only to property damage have no safety alert symbol. These notices shown below are graded according to the degree of danger.

DANGER

indicates that death or severe personal injury **will** result if proper precautions are not taken.

WARNING

indicates that death or severe personal injury **may** result if proper precautions are not taken.

CAUTION

indicates that minor personal injury can result if proper precautions are not taken.

NOTICE

indicates that property damage can result if proper precautions are not taken.

If more than one degree of danger is present, the warning notice representing the highest degree of danger will be used. A notice warning of injury to persons with a safety alert symbol may also include a warning relating to property damage.

Qualified Personnel

The product/system described in this documentation may be operated only by **personnel qualified** for the specific task in accordance with the relevant documentation, in particular its warning notices and safety instructions. Qualified personnel are those who, based on their training and experience, are capable of identifying risks and avoiding potential hazards when working with these products/systems.

Proper use of Siemens products

Note the following:

WARNING

Siemens products may only be used for the applications described in the catalog and in the relevant technical documentation. If products and components from other manufacturers are used, these must be recommended or approved by Siemens. Proper transport, storage, installation, assembly, commissioning, operation and maintenance are required to ensure that the products operate safely and without any problems. The permissible ambient conditions must be complied with. The information in the relevant documentation must be observed.

Trademarks

All names identified by ® are registered trademarks of Siemens AG. The remaining trademarks in this publication may be trademarks whose use by third parties for their own purposes could violate the rights of the owner.

Disclaimer of Liability

We have reviewed the contents of this publication to ensure consistency with the hardware and software described. Since variance cannot be precluded entirely, we cannot guarantee full consistency. However, the information in this publication is reviewed regularly and any necessary corrections are included in subsequent editions.

Preface

Validity of this manual

This document contains information on the following product:

CM 1243-5

Article number 6GK7 243-5DX30-0XE0

Hardware version 3

Firmware version V1.3.8

Communications module for connection of the SIMATIC S7-1200 to PROFIBUS (DP master module)

Communications module for the PROFIBUS DP master function for the SIMATIC S7-1200.



Figure 1 CM 1243-5

At the top right behind the hinged cover of the module housing, you will see the hardware product version printed as a placeholder "X". If the printed text is "X 2 3 4", "X" would be the placeholder for hardware product version 1.

Product name

- CM

In this document, the term "CM" is used instead of the full product name "CM 1243-5".

New in this edition

- New firmware version with the following new functions, among others, compared to version V1.3.4:
Functional improvement in use together with ET200pro and PROFIBUS DPV0 slaves with increased volume of diagnostic messages
- New approvals (CCC / UKEX)
- Editorial revision

Replaced manual edition

Edition 06/2017

Current manual edition on the Internet

You can find the current version of this manual on the Internet pages of Siemens Industry Online Support:

Link: (<https://support.industry.siemens.com/cs/ww/en/view/49851842>)

Purpose of the manual

This manual describes the properties of this module and supports you when installing and commissioning the device.

The necessary configuration steps are described in the form of an overview.

You will also find instructions for operation and maintenance and information on the diagnostics options of the device.

Required experience

To install, commission and operate the CM, you require experience in the following areas:

- Automation engineering
- Setting up the SIMATIC S7-1200 system
- SIMATIC STEP 7
- Data transfer with PROFIBUS

Notes on this document

Product names

- **CM / module / device**

In this document, these terms are used instead of the complete product designation CP 1243-1.

Cross-references in the PDF

In this manual, there are often cross-references to other sections. To be able to return to the initial page after jumping to a cross-reference, some PDF readers support the command <Alt>+<left arrow>.

Search

To show all places where a term was found in a list, some PDF readers support the command <Ctrl>+<Shift>+<F>.

License conditions

Note**Open source software**

Read the license conditions for open source software carefully before using the product. The acceptance of the disclaimers of liability and warranty it contains is a clear precondition of the use of open source software.

You will find license conditions in the document "OSS_CM12435_86.pdf" on the data medium supplied with the product documentation.

Security information

Siemens provides products and solutions with industrial security functions that support the secure operation of plants, systems, machines and networks.

In order to protect plants, systems, machines and networks against cyber threats, it is necessary to implement – and continuously maintain – a holistic, state-of-the-art industrial security concept. Siemens' products and solutions constitute one element of such a concept.

Customers are responsible for preventing unauthorized access to their plants, systems, machines and networks. Such systems, machines and components should only be connected to an enterprise network or the internet if and to the extent such a connection is necessary and only when appropriate security measures (e.g. firewalls and/or network segmentation) are in place.

For additional information on industrial security measures that may be implemented, please visit

Link: (<https://www.siemens.com/industrialsecurity>)

Siemens' products and solutions undergo continuous development to make them more secure. Siemens strongly recommends that product updates are applied as soon as they are available and that the latest product versions are used. Use of product versions that are no longer supported, and failure to apply the latest updates may increase customers' exposure to cyber threats.

To stay informed about product updates, subscribe to the Siemens Industrial Security RSS Feed under

Link: (<https://www.siemens.com/cert>)

Observe the following security recommendations to prevent unauthorized access to the system.

- Evaluate your plant as a whole in terms of security. Use a cell protection concept with suitable products.
- Keep the firmware up to date. Check regularly for security updates of the firmware and use them.
- Restrict physical access to the device to qualified personnel.
- Configure a protection level of the CPU.

Firmware

The firmware is signed and encrypted. This ensures that only firmware created by Siemens can be downloaded to the device.

Note on firmware/software support

Check regularly for new firmware/software versions or security updates and apply them. After the release of a new version, previous versions are no longer supported and are not maintained.

Device defective

If a fault develops, please send the device to your Siemens representative for repair. Repairs on-site are not possible.

Decommissioning

Shut down the device properly to prevent unauthorized persons from accessing confidential data in the device memory.

To do this, restore the factory settings on the device.

You achieve this by resetting the CPU using the online functions of STEP 7.

Recycling and disposal



The product is low in pollutants, can be recycled and meets the requirements of the WEEE directive 2012/19/EU "Waste Electrical and Electronic Equipment".

Do not dispose of the product at public disposal sites. For environmentally friendly recycling and the disposal of your old device contact a certified disposal company for electronic scrap or your Siemens contact.

Keep to the local regulations.

You will find information on returning the product on the Internet pages of Siemens Industry Online Support:

Link: (<https://support.industry.siemens.com/cs/ww/en/view/109479891>)

SIMATIC NET glossary

The SIMATIC NET glossary describes terms that may be used in this document.

You will find the SIMATIC NET glossary in the Siemens Industry Online Support at the following address:

Link: (<https://support.industry.siemens.com/cs/ww/en/view/50305045>)

Training, Service & Support

You will find information on Training, Service & Support in the multi--language document "DC_support_99.pdf" on the data medium supplied with the documentation.

Table of contents

	Preface	3
1	Application and properties	11
1.1	Connecting the S7-1200 to PROFIBUS	11
1.2	Communications services of the CM	11
1.3	Performance data	13
1.4	Requirements for operation	15
1.5	Configuration examples for PROFIBUS	16
2	LEDs and connectors.....	17
2.1	Opening the covers of the housing.....	17
2.2	LEDs	18
2.3	Electrical connections	21
3	Installation, connecting up, commissioning	23
3.1	Important notes on using the device	23
3.1.1	Notes on use in hazardous areas	23
3.1.2	Notes on use in hazardous areas according to ATEX / UKEX / IECEx / CCC-Ex	23
3.1.3	Notes on use in hazardous areas according to UL HazLoc and FM.....	24
3.2	Installation, removal and repairs in hazardous areas	25
3.3	Installing, connecting and commissioning.....	26
3.4	Note on operation	30
3.5	Disassembly.....	31
4	Configuration and program blocks.....	33
4.1	Configuration	33
4.2	Program blocks	34
5	Diagnostics and upkeep	37
5.1	Diagnostics.....	37
5.2	Maintenance	38
5.2.1	Downloading firmware	38
5.2.2	Module replacement.....	39
6	Technical specifications.....	41
6.1	Technical specifications of the CM 1243-5.....	41
6.2	Pin assignment of the socket for the external power supply	42
6.3	Pinout of the D-sub socket	43
A	Dimension drawings.....	45

B Approvals..... 47

C References 53

 Index..... 55

Application and properties

1.1 Connecting the S7-1200 to PROFIBUS

Connecting the S7-1200 to PROFIBUS DP

The S7-1200 can be connected to a PROFIBUS fieldbus system with the following communications modules:

- CM 1242-5
Operates as DP slave
- CM 1243-5
Operates as DP master class 1

If a CM 1242-5 and a CM 1243-5 are installed together, an S7-1200 can perform the following tasks simultaneously:

- Slave of a higher-level DP master system
and
- Master of a lower-level DP master system

1.2 Communications services of the CM

Bus protocol

PROFIBUS communication with the S7-1200 CMs is based on the PROFIBUS DP-V1 protocol. The supported functions and restrictions are described below.

Possible DP slaves for the DP master CM 1243-5

With the DP master module CM 1243-5, the S7-1200 can communicate with the following DP-V0/V1 slaves:

- Distributed I/O SIMATIC ET200
- S7-1200 CPUs with CM 1242-5
- S7-200 CPUs with PROFIBUS DP module EM 277
- SINAMICS converter
- Drives and actuators from various vendors
- Sensors of various vendors
- S7-300/400 CPU with PROFIBUS interface

- S7-300/400 with PROFIBUS CP (for example CP 342-5)
- SIMATIC PC stations with PROFIBUS CP

Types of communication with the CM 1243-5 in DP-V1

The following types of communication are available with DP-V1:

- Cyclic communication

The CM supports cyclic communication for the transfer of process data between DP slave and DP master.

Cyclic communication is handled by the operating system of the CPU. No instructions or software blocks are required for this. The I/O data is read or written directly from/to the process image of the CPU.

- Acyclic communication

The CM also supports acyclic communication:

- The "RALRM" instruction is available for receiving interrupts of the DP slaves.
- The "RDREC" and "WRREC" instructions are available for transferring configuration, diagnostics or I/O data.

Functions not supported by the CM 1243-5:

- SYNC / FREEZE
- Get_Master_Diag

Other communications services of the CM 1243-5

The CM 1243-5 supports the following additional communications services:

- S7 communication

- PUT/GET services

The DP master functions as a client and server for queries from other S7 controllers or PCs via PROFIBUS.

- PG/OP communication

The PG functions allow the downloading of configuration data and user programs from a PG and the transfer of diagnostics data to a PG.

Possible communications partners for OP communication are HMI panels, SIMATIC panel PCs with WinCC flexible or SCADA systems that support S7 communication.

1.3 Performance data

Number of CPs/CMs that can be plugged in per S7-1200 station

You can configure a maximum of three CMs/CPs per station. The maximum number of DP master modules depends on the firmware version of the CPU in the master station:

- CM 1243-5 + CPU with firmware version V2.x: Maximum of 1 DP master (CM 1243-5)
- CM 1243-5 + CPU with firmware version V3.x: Maximum of 3 DP masters (CM 1243-5)

Transmission speeds of the CM 1243-5

As the transmission speed on PROFIBUS, values of 9.6 kbps to 12 Mbps are permitted for the CM.

Characteristic data of the DP interface of the CM 1243-5

- **Number of operable DP slaves**

The number of DP slaves that can be operated with the DP master depends on the STEP 7 version, the firmware version of the CPU in the master station and the firmware version of the CM 1243-5:

- CM with a CPU with firmware V3: Maximum of 32 DP slaves
- CM with a CPU with firmware V2: Maximum of 16 DP slaves

You will find the required STEP 7 version and firmware version of the CPU in the section Requirements for operation (Page 15).

In conjunction with a CPU with firmware version 2.x, the maximum number of operable DP slaves is reduced by the following modules or nodes:

- CM 1242-5 slave modules plugged into the station of the DP Master
- PROFINET IO devices connected to the station of the DP Master

Example

The DP master module CM 1243-5 is plugged into the station.

There are also two CM 1242-5 DP slave modules plugged into the station.

5 PROFINET IO devices are also connected to the CPU.

In this case, the maximum number of DP slaves that can be operated with the CM 1243-5 is 9. ($16 - 2 - 5 = 9$)

- **Number of operable slots**

Total number of operable slots: Maximum 256

Any distribution of the slots as I slots and Q slots is permitted.

Note

Bi-directional slots are counted double.

- **Data areas of the DP master**

Size of the DP data areas of the DP master: Max. 1024 bytes

- Input area of the DP master in total: Max. 512 bytes
- Output area of the DP master in total: Max. 512 bytes

- **Data areas of the DP slaves**

Maximum size of the DP data areas of the DP slaves

- Input area per DP slave: Max. 244 bytes
- Output area per DP slave: Max. 244 bytes
- Diagnostics data area per DP slave: Max. 244 bytes

Characteristic data of S7 communication

- Number of possible connections for S7 communication in total: 8

Of which maximum:

- Configured connections for PUT/GET services: 6
- PG/OP connections: 3

- User data per frame

- PUT: Max. 209 bytes
- GET: Max. 222 bytes

1.4 Requirements for operation

Configuration tool

To configure the module, the following configuration tool is required:

- STEP 7 Basic

For the precise version, refer to the following table.

CPUs of the S7-1200

Use of PROFIBUS functionalities with the S7-1200 requires CPUs with firmware versions 2.0 or higher in the master station. For the precise version, refer to the following table.

Supported functions depending on the firmware and STEP 7 versions

Required components	Functions and configuration limits *
• CM: Firmware version V1.3.3 • CPU: Firmware version V3.0 or V4.x • STEP 7 V13	All functions and the full configuration limits are supported.
• CM: Firmware version V1.3.4 • CPU: Firmware version V3.0 or V4.x • STEP 7 V13 + SP1 The CM remains configurable with STEP 7 V13.	All functions and the full configuration limits are supported. When configuring with STEP 7 V13 + SP1 operation of the CM in projects with ET 200S HF is supported.
• CM: Firmware version V1.3.8 • CPU: Firmware version V3.0 or V4.x • STEP 7 V13 or higher	All functions and the full configuration limits are supported.

* You will find the configuration limits in the section Performance data (Page 13).

The CM should always be operated with the current firmware version. For information on loading newer firmware versions and the firmware files to be used, refer to the section Downloading firmware (Page 38).

1.5 Configuration examples for PROFIBUS

Below, you will find examples of configurations in which the CM 1242-5 is used as a DP slave and the CM 1243-5 is used as a DP master.

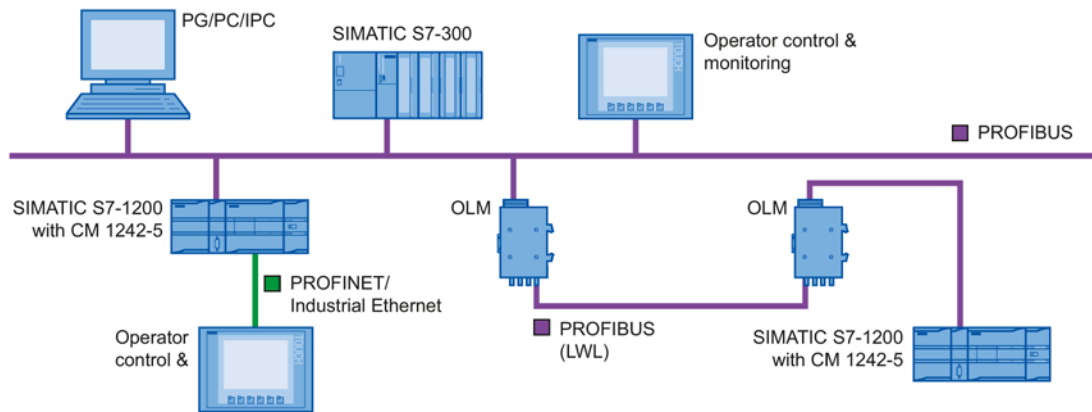


Figure 1-1 Configuration example with a CM 1242-5 as PROFIBUS slave

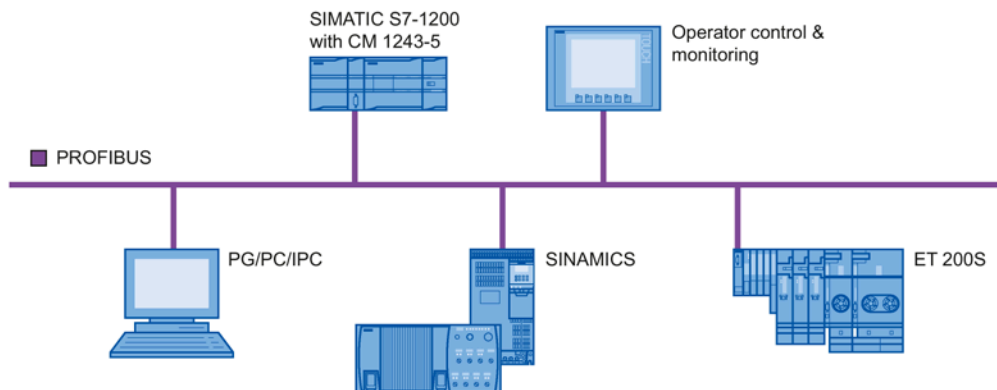


Figure 1-2 Configuration example with a CM 1243-5 as PROFIBUS master

LEDs and connectors

2.1 Opening the covers of the housing

Location of the display elements and the electrical connectors

The LEDs for the detailed display of the module statuses are located behind the upper cover of the module housing.

The terminals for the power supply are located on the top of the module.

The PROFIBUS connector is located behind the lower cover of the module.

Opening the covers of the housing

Open the upper or lower cover of the housing by pulling it down or up as shown in the illustration. The covers extend beyond the housing to give you a grip.

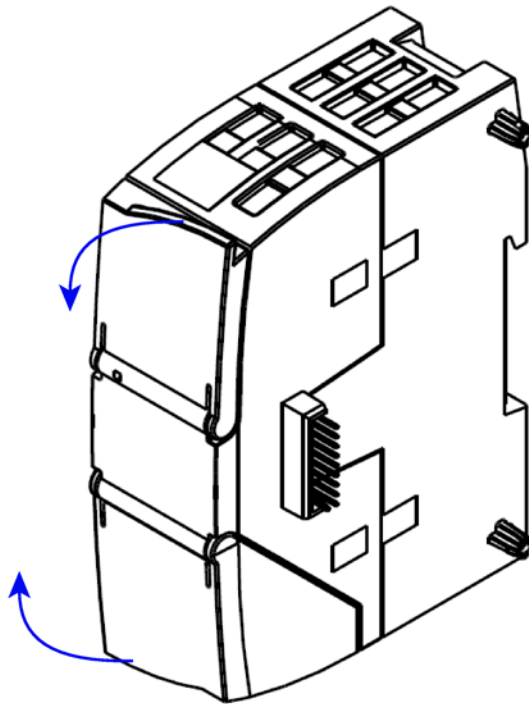


Figure 2-1 Opening the covers of the housing

2.2 LEDs

LEDs of the module

The module has various LEDs for displaying the status:

- LED on the front panel

The "DIAG" LED that is always visible shows the basic statuses of the module.

Table 2- 1 LED on the front panel

LED / colors	Name	Meaning
 red / green	DIAG	Display of the basic status of the module

- LEDs below the upper cover of the housing

Open the upper housing cover. The LEDs here provide more detailed information on the module status.

Table 2- 2 LEDs below the upper cover of the housing

LED / colors	Name	Meaning
 yellow / green	RUN/STOP	Details on the operational and communications status of the module
 red	ERROR	Group error
	- not used -	-
	- not used -	-

Note

LED colors when the module starts up

When the module starts up, all its LEDs are lit for a short time. Multicolored LEDs display a color mixture. At this point in time, the color of the LEDs is not clear.

Display of the operating and communication status

The LED symbols in the following tables have the following significance:

Table 2- 3 Meaning of the LED symbols

Symbol					-
LED status	OFF	ON (steady light)	Flashing, one color	Flashing yellow-green	Not relevant

The LEDs indicate the operating and communications status of the module according to the following scheme:

Table 2- 4 Display of the basic states of the module by the "DIAG" LED

DIAG (red / green)	Meaning	Comment
	Power OFF	
 green	RUN without errors	
 flashing green	• Startup • STOP without errors • No project data • Firmware update	The individual states are signaled by the RUN/STOP and ERROR LEDs (see below).
 flashing red	Problem / error	The individual states are signaled by the RUN/STOP and ERROR LEDs (see below).

Table 2- 5 Display schemes for detailed module statuses

DIAG (red / green)	-	RUN/STOP (yellow / green)	ERROR (red)	Meaning
Detailed status schemes				
 green				RUN without errors, Exchange of user data with DP master
 flashing green				- Stopped (STOP) without errors - No project data available
 flashing green				Starting up (STOP → RUN)
 flashing green				Loading firmware (The RUN/STOP and ERROR LEDs flash alternately.)
 flashing red				RUN with PROFIBUS problem: - DP slave errors - No master-slave connection - PROFIBUS cable not connected or not detected
 flashing red				System fault: - CM has not received an address from the CPU - Power supply of the CM was interrupted - CPU reset to factory defaults Solution when the error is permanent: Station power → OFF → ON Other possible problems: - Module fault - Incomplete firmware version Contact the hotline.

In STOP mode, configuring and performing diagnostics on the CM remain possible.

2.3 Electrical connections

Power supply

The 3-pin socket for the external 24 V DC power supply is located on the top of the module. The matching plug ships with the product.

You will find the pin assignment of the socket in section Pin assignment of the socket for the external power supply (Page 42).

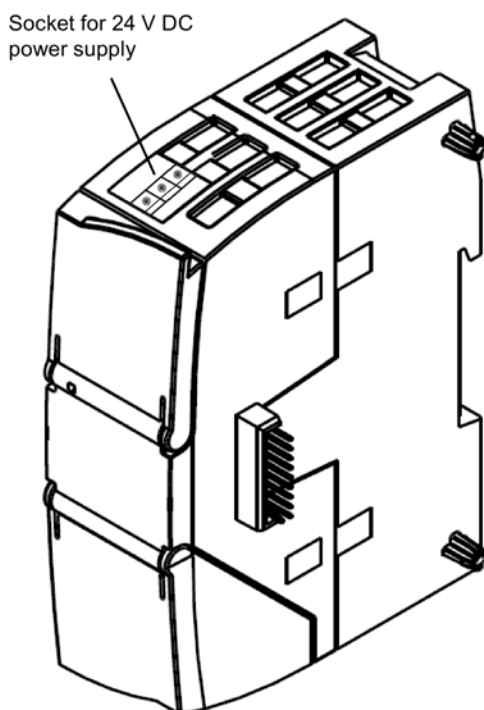


Figure 2-2 Socket for the 24 V DC power supply

9-pin D-sub female connector (PROFIBUS)

The PROFIBUS connector is located behind the lower cover of the module. The interface is a 9-pin D-sub female connector operating according to the RS-485 standard.

You also have the option of connecting to optical PROFIBUS networks via an Optical Bus Terminal OBT or an Optical Link Module OLM.

You will find the pin assignment of the D-sub socket in section Pinout of the D-sub socket (Page 43).

More detailed information on the electrical connections

For technical information on the electrical connections, refer to the section Technical specifications (Page 41).

Installation, connecting up, commissioning

Safety notices on the use of the device

Note the following safety notices when setting up and operating the device and during all associated work such as installation, connecting up or replacing the device.

3.1 Important notes on using the device

3.1.1 Notes on use in hazardous areas

WARNING

The device may only be operated in an environment with pollution degree 1 or 2 as described in EN/IEC 60664-1, GB/T 16935.1.

WARNING

EXPLOSION HAZARD

You may only connect or disconnect cables carrying electricity when the power supply is switched off or when the device is in an area without inflammable gas concentrations.

3.1.2 Notes on use in hazardous areas according to ATEX / UKEX / IECEx / CCC-Ex

WARNING

Requirements for the cabinet

To comply with EU Directive 2014/34 EU (ATEX 114), UK Regulation SI 2016/1107 or the conditions of IECEx or CCC-Ex, the housing or cabinet must meet the requirements of at least IP54 (according to EN/IEC 60529, GB/T 4208) in compliance with EN IEC/IEC 60079-7, GB 3836.8.

 WARNING

Suitable cables at high ambient temperatures in hazardous area

Use heat-resistant cables with an ambient temperature $\geq 60\text{ °C}$; these cables must be rated for an ambient temperature that is at least 20 °C higher. The cable entries used on the housing must comply with the IP degree of protection required by EN IEC 60079-0 / GB 3836.1.

 WARNING

Transient overvoltages

Take measures to prevent transient overvoltages of more than 40% of the rated voltage (or more than 119 V). This is the case if you only operate devices with SELV (safety extra-low voltage).

3.1.3

Notes on use in hazardous areas according to UL HazLoc and FM

This equipment is suitable for use in Class I, Division 2, Groups A, B, C and D or non-hazardous locations only.

This equipment is suitable for use in Class I, Zone 2, Group IIC or non-hazardous locations only.

 WARNING

When used in hazardous environments corresponding to Class I, Division 2 or Class I, Zone 2, the device must be installed in a cabinet or a suitable enclosure.

 WARNING

If the device is installed in a cabinet, the inner temperature of the cabinet corresponds to the ambient temperature of the device.

 WARNING

EXPLOSION HAZARD

The equipment is intended to be installed within an ultimate enclosure. The inner service temperature of the enclosure corresponds to the ambient temperature of the module. Use installation wiring connections with admitted maximum operating temperature of at least 30 °C higher than maximum ambient temperature.

3.2 Installation, removal and repairs in hazardous areas

WARNING

Impermissible accessories and spare parts

Risk of explosion in hazardous areas

- Only use original accessories and original spare parts.
- Observe all relevant installation and safety instructions described in the manuals for the device or supplied with the accessories or spare parts.

WARNING

Unsuitable cables or connectors

Risk of explosion in hazardous areas

- Only use connectors that meet the requirements of the relevant type of protection.
- If necessary, tighten the connector screw connections, device fastening screws, grounding screws, etc. according to the specified torques.
- Close unused cable openings for electrical connections.
- Check the cables for a tight fit after installation.

WARNING

Improper installation of shielded cables

There is a risk of explosion due to equalizing currents between the hazardous area and the non-hazardous area.

- Ground shielded cables that cross hazardous areas at one end only.
- Lay a potential equalization conductor when grounding at both ends.

WARNING

Lack of equipotential bonding

If there is no equipotential bonding in hazardous areas, there is a risk of explosion due to equalizing current or ignition sparks.

- Ensure that equipotential bonding is available for the device.

WARNING

Unprotected cable ends

There is a risk of explosion due to unprotected cable ends in hazardous areas.

- Protect unused cable ends according to IEC/EN 60079-14.

 WARNING

Insufficient isolation of intrinsically safe and non-intrinsically safe circuits

Risk of explosion in hazardous areas

- When connecting intrinsically safe and non-intrinsically safe circuits, ensure that the galvanic isolation is performed properly in compliance with local regulations (e.g. IEC 60079-14).
- Observe the device approvals applicable for your country.

 WARNING

Unauthorized repair of devices in explosion-proof design

Risk of explosion in hazardous areas

- Repair work may only be performed by personnel authorized by Siemens.

3.3 Installing, connecting and commissioning

NOTICE

Improper mounting

Improper mounting may damage the device or impair its operation.

- Before mounting the device, always ensure that there is no visible damage to the device.
- Mount the device using suitable tools. Observe the information in the respective section about mounting.

 WARNING

Open equipment

The devices are "open equipment" acc. to the standard IEC 61010-2-201 or UL 61010-2-201 / CSA C22.2 No. 61010-2-201. To fulfill requirements for safe operation with regard to mechanical stability, flame retardation, stability, and protection against contact, the following alternative types of installation are specified:

- Installation in a suitable cabinet.
- Installation in a suitable enclosure.
- Installation in a suitably equipped, enclosed control room.

 WARNING

Power supply

The device is designed for operation with a directly connectable safety extra low voltage (SELV) from a limited power source (LPS).

The power supply therefore needs to meet at least one of the following conditions:

- Only safety extra low voltage (SELV) with limited power source (LPS) complying with IEC 60950-1 / EN 60950-1 / VDE 0805-1 or IEC 62368-1 / EN 62368-1 / VDE 62368-1 may be connected to the power supply terminals.
- The power supply unit for the device must meet NEC Class 2 according to the National Electrical Code (r) (ANSI / NFPA 70).

If the equipment is connected to a redundant power supply (two separate power supplies), both must meet these requirements.

Prior to installation and commissioning

 WARNING

Read the system manual "S7-1200 Programmable Controller"

Prior to installation, connecting up and commissioning, read the relevant sections in the system manual "S7-1200 Programmable Controller" (refer to the documentation in the Appendix).

When installing and connecting up, keep to the procedures described in the system manual "S7-1200 Programmable Controller".

Make sure that the power supply is turned off when installing/uninstalling the devices.

Configuration

One requirement for the commissioning of the CP is the completeness of the STEP 7 project data. You should also read the section "Configuration and program blocks (Page 33)".

Dimensions for installation

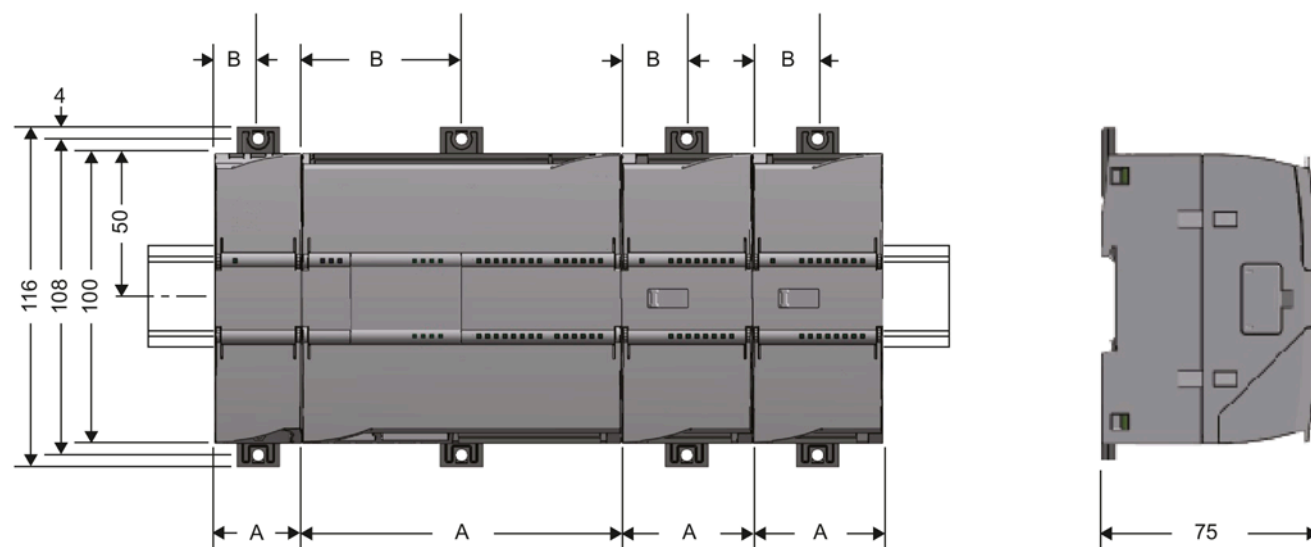


Figure 3-1 Dimensions for installation of the S7-1200

Table 3- 1 Dimensions for installation

S7-1200 devices		Width A	Width B *
CPU	CPU 1211C, CPU 1212C	90 mm	45 mm
	CPU 1214C	110 mm	55 mm
Signal modules	8 or 16 digital I/Os 2, 4 or 8 analog I/Os Thermocouple, 4 or 8 I/Os RTD, 4 I/Os	45 mm	22.5 mm
	16 analog I/Os RTD, 8 I/Os	70 mm	35 mm
Communications interfaces	CM 1241 RS-232 and CM 1241 RS-485	30 mm	15 mm
	CM 1243-5 (PROFIBUS master) CM 1242-5 (PROFIBUS slave)	30 mm	15 mm
	CP 1242-7 (GPRS CP)	30 mm	15 mm

* Width B: The distance between the edge of the housing and the center of the hole in the DIN rail mounting clip

DIN rail mounting clips

All CPUs, SMs, CMs and CPs can be installed on the DIN rail in the cabinet. Use the pull-out DIN rail mounting clips to secure the device to the rail. These mounting clips also lock into place when they are extended to allow the device to be installed in a switching panel. The inner dimension of the hole for the DIN rail mounting clips is 4.3 mm.

 
 
Procedure for installation and commissioning

Note

Installation location

During installation, make sure that the upper and lower ventilation slits of the module are not obstructed and good ventilation is possible. Above and below the device, there must be a clearance of 25 mm to allow air to circulate and prevent overheating.

Remember that the permitted temperature ranges depend on the position of the installed device.

Device position / permitted temperature range	Installation location
Horizontal installation of the rack: 0 °C to 55 °C	
Vertical installation of the rack: 0 °C to 45 °C	

Note

Connection with power off

Only wire up the S7-1200 with the power turned off.

Power supply from the power outputs of the CPU

The power of the CM must be supplied via the power outputs of the CPU.

Keep within the maximum load of the power outputs of the CPU.

You will find data relating to the current consumption and power loss of the CM in the section Technical specifications of the CM 1243-5 (Page 41).

Grounding the PROFIBUS cable

If a CM 1243-5 is plugged into the S7-1200, a PROFIBUS cable must always be connected to the CM 1243-5. The PROFIBUS cable must be grounded.

3.4 Note on operation

Table 3- 2 Procedure for installation and connecting up

Step	Execution	Notes and explanations
1	Mount the CM on the DIN rail and connect it to the module to its right.	Use a 35 mm DIN rail. The slots to the left of the CPU are permitted.
2	Secure the DIN rail.	
3	Secure the power supply wires to the power output of the CPU.	
4	Secure the wires of the power supply to the plug supplied with the CM and insert the plug in the socket on the top of the CM.	The pinning is shown beside the socket on the top of the housing. You will also find this in the section Pin assignment of the socket for the external power supply (Page 42).
5	Connect the PROFIBUS cable to the D-sub female connector of the CM.	Lower surface of the CM
6	Turn on the power supply.	
7	Close the front covers of the module and keep them closed during operation.	
8	The remaining steps in commissioning involve downloading the STEP 7 project data.	The STEP 7 project data of the CM is transferred when you download to the station. To load the station, connect the engineering station on which the project data is located to the Ethernet interface of the CPU. You will find more detailed information on loading in the following sections of the STEP 7 online help: • "Loading project data" • "Using online and diagnostics functions"

PROFIBUS connection

Only use 90° connectors for the PROFIBUS connection. With other connector types, you cannot close the front cover of the device.

3.4 Note on operation

NOTICE

Closing the front panels

To ensure interference-free operation, keep the front panels of the module closed during operation.

3.5 Disassembly

WARNING

Improper disassembly

Improper disassembly may result in a risk of explosion in hazardous areas.

For proper disassembly, observe the following:

- Before starting work, ensure that the electricity is switched off.
- Secure remaining connections so that no damage can occur as a result of disassembly if the system is accidentally started up.

Uninstalling

1. Remove the connectors of the data cables before you switch off the power supply and thus terminate the ground connection of the devices.
2. Switch off the power supply to the station.
3. Pull down the two lower DIN rail clamps on the rear of the devices into the extended position using a slotted screwdriver.

This releases the locking mechanism.

4. Swing the devices out of the DIN rail profile to the front.

Configuration and program blocks

4.1 Configuration

Configuration in STEP 7

You configure the DP modules and DP master systems in SIMATIC STEP 7. You will find the required version in the section Requirements for operation (Page 15).

You will find the number of CMs/CPs that can be configured per station in the section Performance data (Page 13).

Overview of the STEP 7 configuration

Follow the steps below when configuring:

1. Create a STEP 7 project.
2. Insert the required SIMATIC stations.
3. Insert the communications modules and other required modules in the stations.
4. Select the PROFIBUS interface of the master module and create a DP master system using the shortcut menu (right mouse button).
5. Configure the DP master system in the following parameter groups:
 - General
 - Network settings
 - Cable configuration
 - Additional network nodes
 - Bus parameters
6. Network the PROFIBUS slaves with the master system:
 - Either using the shortcut menu command with the PROFIBUS interface selected
 - Or in the "Operating mode" parameter group of the slave module
7. Configure the slave modules.

Configuring the DP slaves is described in the manual of the slave module.
8. Configure the PROFIBUS master module.

This affects the properties in the following parameter groups:

 - General
 - PROFIBUS interface with the lower-level parameter groups "General" and "PROFIBUS address". The "Mode" of the DP master is preset.

9. Configure the remaining modules and submodules according to your requirements.
10. Save the project.

Note

You will find more detailed information on configuring the individual parameters in the help system of STEP 7.

Downloading project data

When you load the station, the project data of the CM is stored on the CPU.

4.2 Program blocks

DP data exchange with the CPU

No instructions are necessary for GP data exchange with the CPU. The cyclically transferred slave data is written to the input and output areas of the CPU.

Reading and writing consistent data of a standard slave

With the DPRD_DAT and DPWR_DAT instructions, you can read consistent data with a length of > 4 bytes from a slave or transfer consistent data to a slave.

Receiving interrupts with RALRM

The RALRM instruction is used to receive interrupts from DP slaves and the corresponding information is indicated by the output parameters of the instruction.

Reading and writing a data record with the RDREC and WRREC instructions

The "RDREC" and "WRREC" instructions are available for transferring configuration, diagnostics or I/O data.

S7 communication: Data exchange with remote communications partners

The CM can communicate with remote partners via PROFIBUS. The following instructions are used:

- PUT: Instruction for writing data to a remote CPU or a remote PC
- GET: Instruction for reading data from a remote CPU or a remote PC

Remote communications partners can be S7-CPU, PCs, PGs, TDs/OPs or SCADA systems, such as WinCC.

Note

Information on the instructions

You will find information on the instructions mentioned above in the STEP 7 help.

Diagnostics and upkeep

5.1 Diagnostics

Diagnostics options

You have the following diagnostics options available for the module:

- The LEDs of the module

For information on the LED displays, refer to the section LEDs (Page 18).

- STEP 7: The "Diagnostics" tab in the Inspector window

Here, you can obtain the following information on the selected module:

- Entries in the diagnostics buffer of the CPU
- Information on the online status of the module

- STEP 7: Diagnostics functions in the "Online > Online and diagnostics" menu

Here, you can obtain static information on the selected module:

- General information on the module
- Diagnostics status
- Information about the PROFIBUS interface:
 - Settings
 - Statistics
 - Node list with PROFIBUS address and response on PROFIBUS

You can obtain further information on the diagnostics functions of STEP 7 in the STEP 7 online help.

- DP diagnostics

You will find the description of the functions of DP diagnostics in the documentation of the relevant slave (for example, in the manual of the CM 1242-5, see /3/ (Page 54)).

The evaluation of diagnostics data records requested by the DP master and the diagnostics interrupts or diagnostics alarms of the DP slaves is handled in the user program of the DP master station.

5.2 Maintenance

**! CAUTION****Hot surfaces**

Risk of burns during maintenance work on parts with a surface temperature above 70 °C (158 °F).

- Take appropriate protective measures, for example, wear protective gloves.
- Once maintenance work is complete, restore the touch protection measures.

! WARNING**Cleaning the housing**

- **In hazardous areas**
Only clean the outer parts of the housing with a damp, but not wet, cloth.
- **In non-hazardous areas**
Only clean the outer parts of the housing with a dry cloth.

Do not use any liquids or solvents.

! WARNING**Unauthorized repair of devices in explosion-proof design**

Risk of explosion in hazardous areas

- Repair work may only be performed by personnel authorized by Siemens.

5.2.1 Downloading firmware

New firmware versions

If a new firmware version is available for the module, you will find this on the Internet pages of Siemens Industry Online Support:

Link: (<https://support.industry.siemens.com/cs/ww/en/ps/15669/dl>)

Loading the firmware file

To load a firmware file you require a SIMATIC memory card.

You will find a description of the procedure for loading firmware on the respective page of Siemens Industry Online Support.

You can recognize that firmware is being loaded by the flashing LEDs of the CM, see section LEDs (Page 18).

5.2.2 Module replacement

Module replacement



WARNING

Read the system manual "S7-1200 Programmable Controller"

Prior to installation, connecting up and commissioning, read the relevant sections in the system manual "S7-1200 Programmable Controller" (refer to the documentation in the Appendix).

When installing and connecting up, keep to the procedures described in the system manual "S7-1200 Programmable Controller".

Make sure that the power supply is turned off when installing/uninstalling the devices

The configuration data of the CM is stored on the local CPU. This allows simple replacement of this communications module when necessary.

When the station starts up again, the new CM reads the project data from the CPU.

Technical specifications

6.1 Technical specifications of the CM 1243-5

Table 6- 1 Technical specifications of the CM 1243-5

Technical specifications	
Article number	6GK7 243-5DX30-0XE0
Interfaces	
Connection to PROFIBUS	9-pin D-sub female connector
Maximum current consumption on the PROFIBUS interface when connecting network components (for example optical network components)	15 mA at 5 V (only for bus termination) *)
Permitted ambient conditions	
Ambient temperature	
• During storage	• -40 °C to 70 °C
• During transportation	• -40 °C to 70 °C
• During operation with the rack installed horizontally	• 0 °C to +55 °C
• During operation with the rack installed vertically	• 0 °C to 45 °C
Relative humidity at 25 °C during operation, without condensation, maximum	95%
Degree of protection	IP20
Power supply, current consumption and power loss	
Type of power supply	DC
Power supply / external	24 V
• minimum	• 19.2 V
• maximum	• 28.8 V
Current consumption (typical)	
• from 24 V DC	• 100 mA
• from the S7-1200 backplane bus	• 0 mA
Effective power loss (typical)	
• from 24 V DC	• 2.4 W
• from the S7-1200 backplane bus	• 0 W
Power supply 24 VDC / external	
• Min. cable cross section	• min.: 0.14 mm ² (AWG 25)
• Max. cable cross section	• max.: 1.5 mm ² (AWG 15)
• Tightening torque of the screw terminals	• 0.45 Nm (4 lb-in)

6.2 Pin assignment of the socket for the external power supply

Technical specifications	
Electrical isolation	710 VDC for 1 minute
• PROFIBUS interface to ground • PROFIBUS interface to internal circuit	
Dimensions and weights	
• Width • Height • Depth	• 30 mm • 100 mm • 75 mm
Weight	
• Net weight • Weight including packaging	• 134 g • 171 g

- › The current load of an external consumer connected between VP (pin 6) and DGND (pin 5) must not exceed a maximum of 15 mA (short-circuit proof) for bus termination.

6.2 Pin assignment of the socket for the external power supply

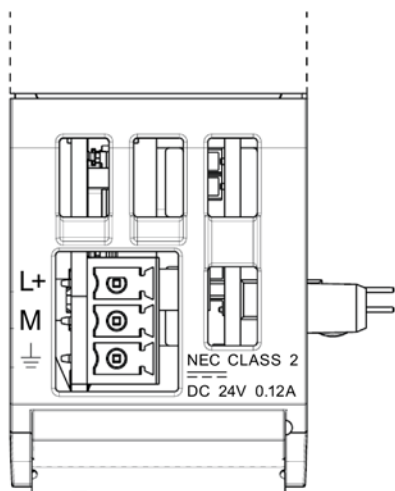


Figure 6-1 Socket for the external 24 VDC power supply (view from above)

Table 6-2 Pin assignment of the socket for the external power supply

Pin	Labeling	Function
1	L+	+ 24 VDC
2	M	Ground reference for + 24 VDC
3		Ground connector

6.3 Pinout of the D-sub socket

PROFIBUS interface

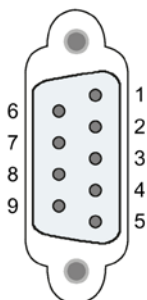


Table 6- 3 Pinout of the D-sub socket

Pin	Description	Pin	Description
1	- not used -	6	VP: Power supply +5 V only for bus terminating resistors; not for supplying external devices
2	- not used -	7	- not used -
3	RxD/TxD-P: Data line B	8	RxD/TxD-N: Data line A
4	CNTR-P: RTS	9	- not used -
5	DGND: Ground for data signals and VP	Housing	Ground connector

PROFIBUS cable and connector

NOTICE

Contacting the shield of the PROFIBUS cable

The shield of the PROFIBUS cable must be contacted.

To do this, strip the insulation from the end of the PROFIBUS cable and connect the shield to functional earth.

Note

If you use a 180° PROFIBUS or a PG connector, the lower panel cannot be completely closed.

Dimension drawings

Note

All dimensions in the drawings are in millimeters.

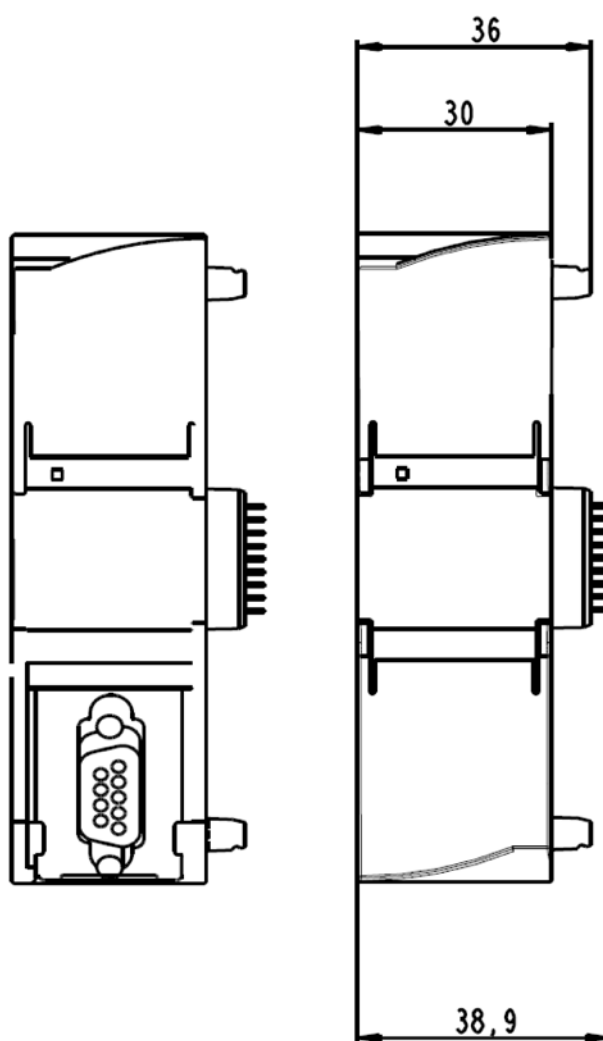


Figure A-1 CM 1243-5 - front view

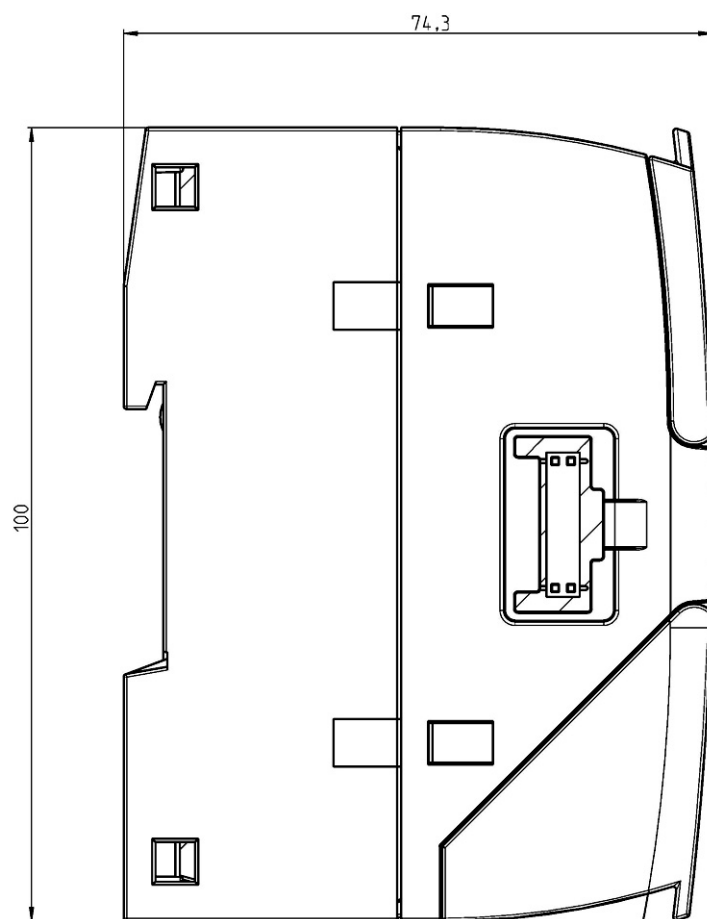


Figure A-2 CM 1243-5 - left side view

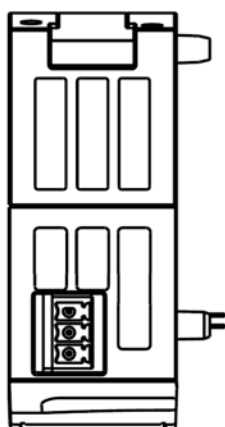


Figure A-3 CM 1243-5 - view from above

Approvals

Approvals issued

Note

Issued approvals on the type plate of the device

The specified approvals - with the exception of the certificates for shipbuilding - have only been obtained when there is a corresponding mark on the product. You can check which of the following approvals have been granted for your product by the markings on the type plate. The approvals for shipbuilding are an exception to this.

Certificates for shipbuilding and national approvals

The device certificates for shipbuilding and special national approvals can be found in Siemens Industry Online Support on the Internet:

Link: (<https://support.industry.siemens.com/cs/ww/en/ps/15669/cert>)

Documents on the Internet

You will find the declarations of conformity listed below and certificates of the product on the Internet at the following address:

Link: (<https://support.industry.siemens.com/cs/ww/en/ps/15667/cert>)

You can view the considered standards in the respective certificate which is available on the Internet at the address listed above.

Address for declarations of conformity

The EU and the UK declarations of conformity are available to all responsible authorities at:

Siemens Aktiengesellschaft
Digital Industries
P.O. Box 48 48
90026 Nuremberg
Germany

EU declaration of conformity



The CP meets the requirements and safety objectives of the following EU directives and it complies with the harmonized European standards (EN) for programmable logic controllers which are published in the official documentation of the European Union.

- **2014/34/EU (ATEX explosion protection directive)**
Directive of the European Parliament and the Council of 26 February 2014 on the approximation of the laws of the member states concerning equipment and protective systems intended for use in potentially explosive atmospheres, official journal of the EU L96, 29/03/2014, pages. 309-356
- **2014/30/EU (EMC)**
EMC directive of the European Parliament and of the Council of 26 February 2014 on the approximation of the laws of the member states relating to electromagnetic compatibility; official journal of the EU L96, 29/03/2014, p. 79-106
- **2011/65/EU (RoHS)**
Directive of the European Parliament and of the Council of 8 June 2011 on the restriction of the use of certain hazardous substances in electrical and electronic equipment

UK Declaration of Conformity



Importer UK:

Siemens plc
Sir William Siemens House
Princess Road
Manchester
M20 2UR

The product meets the requirements of the following directives:

- UKEX Regulations
SI 2016/1107 The Equipment and Protective Systems Intended for Use in Potentially Explosive Atmospheres Regulations 2016, and related amendments.
- EMC Regulations
SI 2016/1091 The Electromagnetic Compatibility Regulations 2016, and related amendments.
- RoHS Regulations
SI 2012/3032 The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012, and related amendments.

ATEX / IECEx / UKEX / CCC-Ex

Observe the information in the "Use of subassemblies/modules in a Zone 2 Hazardous Area" document, which you will find here:

- On the documentation DVD supplied with the product, under:
"All documents" > "Use of subassemblies/modules in a Zone 2 Hazardous Area"
- On the Internet at the following address:
Link: (<https://support.industry.siemens.com/cs/ww/en/view/78381013>)

The conditions must be met for safe usage of the product according to the section Notes on use in hazardous areas (Page 23).

The product meets the explosion protection requirements outlined below.

 WARNING
Observe installation guidelines The product meets the requirements if you observe the following during installation and operation: • The notes in the section Notes on use in hazardous areas according to ATEX / UKEX / IECEx / CCC-Ex (Page 23) • The installation instructions in the document /1/ (Page 53)

IECEx

Classification: Ex ec IIC T4 Gc, Certificate no.: IECEx DEK 18.0019X

The product meets the requirements of the standards:

- IEC 60079-0 - Explosive atmospheres - Part 0: Equipment - General requirements
- IEC 60079-7 - Explosive Atmospheres - Part 7: Equipment protection by increased safety 'e'

ATEX

Classification: II 3 G Ex ec IIC T4 Gc, Certificate no.: DEKRA 18ATEX0027 X

The product meets the requirements of the standards:

- EN IEC 60079-0 - Explosive atmospheres - Part 0: Equipment - General requirements
- EN 60079-7 - Explosive Atmospheres - Part 7: Equipment protection by increased safety 'e'

UKEX

Classification: II 3 G Ex ec IIC T4 Gc, Certificate no.: DEKRA 21UKEX0003 X

The product meets the requirements of the standards:

- EN IEC 60079-0 - Explosive atmospheres - Part 0: Equipment - General requirements
- EN 60079-7 - Explosive Atmospheres - Part 7: Equipment protection by increased safety 'e'

Importer UK: Siemens plc (see above)



CCC-Ex

Classification: Ex na IIC T4 Gc (not on the type plate), Certificate no.: 2020322310002625

The product meets the requirements of the following standards:

- GB 3836.1
Hazardous areas - Part 0: Equipment - General requirements
- GB 3836.3
Explosive atmospheres - Part 3: Equipment protection by increased safety "e"
- GB 3836.8
Explosive atmospheres - Part 15: Equipment protection by type of protection 'n'

EMC

The CP meets the requirements of the EU Directive 2014/30/EU "Electromagnetic Compatibility" (EMC directive).

Applied standards:

- EN 61000-6-4
Electromagnetic compatibility (EMC) - Part 6-4: Generic standards - Emission standard for industrial environments
- EN 61000-6-2
Electromagnetic compatibility (EMC) - Part 6-2: Generic standards - Immunity for industrial environments

RoHS

The CP meets the requirements of the EC directive 2011/65/EU on the restriction of the use of certain hazardous substances in electrical and electronic equipment.

Applied standard:

- EN IEC 63000

c(UL)us



Applied standards:

- Underwriters Laboratories, Inc.: UL 61010-1 (Safety Requirements for Electrical Equipment for Measurement, Control, and Laboratory Use - Part 1: General Requirements)
- IEC/UL 61010-2-201 (Safety requirements for electrical equipment for measurement, control and laboratory use. Particular requirements for control equipment)
- Canadian Standards Association: CSA C22.2 No. 142 (Process Control Equipment)

File Number: E223122

cULus Hazardous (Classified) Locations



Underwriters Laboratories, Inc.: cULus IND. CONT. EQ. FOR HAZ. LOC.

Applied standards:

- ANSI ISA 12.12.01
- CSA C22.2 No. 213-M1987

APPROVED for Use in:

- Cl. 1, Div. 2, GP. A, B, C, D T4A; Ta = -20 °C...60 °C
- Cl. 1, Zone 2, GP. IIC T4; Ta = -20 °C...60 °C

Report / UL file: E223122 (NRAG7.E223122)

Note the conditions for the safe deployment of the product according to the section Notes on use in hazardous areas according to UL HazLoc and FM (Page 24).

FM



Factory Mutual Approval Standard Class Number 3600, 3611, 3810, ANSI/ISA-61010-1

Equipment rating:

Class I, Division 2, Group A, B, C, D, Temperature Class T4A, Ta = 60 °C

Class I, Zone 2, Group IIC, Temperature Class T4, Ta = 60 °C

(Ta reduced to 50 °C when mounted vertically)

Report Number: 3040919

Observe the conditions for safe usage of the CP according to the section Notes on use in hazardous areas according to UL HazLoc and FM (Page 24).

Australia - RCM



The CP meets the requirements of the AS/NZS 2064 standards (Class A).

EAC (Eurasian Conformity)



Customs union of Russia, Belarus and Kazakhstan

Declaration of conformity according to the technical regulations of the customs union (TR CU)

MSIP 요구사항 - For Korea only



A급 기기(업무용 방송통신기자재)

이 기기는 업무용(A급) 전자파 적합기기로서 판매자 또는 사용자는 이 점을 주의하시기 바라며, 가정 외의 지역에서 사용하는 것을 목적으로 합니다.

Note that in terms of the emission of interference, this device corresponds to limit class A. This device can be used in all areas except for residential environments.

Current approvals

SIMATIC NET products are regularly submitted to the relevant authorities and approval centers for approvals relating to specific markets and applications.

If you require a list of the current approvals for individual devices, consult your Siemens contact or check the Internet pages of Siemens Industry Online Support:

Link: (<https://support.industry.siemens.com/cs/ww/en/ps/15669/cert>)

References

Where to find Siemens documentation

- Article numbers

You will find the article numbers for the Siemens products of relevance here in the following catalogs:

- SIMATIC NET - Industrial Communication / Industrial Identification, catalog IK PI
- SIMATIC - Products for Totally Integrated Automation and Micro Automation, catalog ST 70

You can request the catalogs and additional information from your Siemens representative. You will also find the product information in the Siemens Industry Mall at the following address:

Link: (<https://mall.industry.siemens.com>)

- Manuals on the Internet

You will find SIMATIC NET manuals on the Internet pages of Siemens Industry Online Support:

Link: (<https://support.industry.siemens.com/cs/ww/en/ps/15669/man>)

Go to the required product in the product tree and make the following settings:

Entry type "Manuals"

- Manuals on the data medium

You will find manuals of SIMATIC NET products on the data medium that ships with many of the SIMATIC NET products.

/1/

SIMATIC
S7-1200 Automation System
system manual
Siemens AG

Link: (<https://support.industry.siemens.com/cs/ww/en/view/109759862>)

/2/

/2/

SIMATIC NET
PROFIBUS Network Manual
system manual
Siemens AG
Link: (<https://support.industry.siemens.com/cs/ww/en/view/35222591>)

/3/

SIMATIC NET
CM 1242-5
Operating Instructions
Siemens AG
Link: (<https://support.industry.siemens.com/cs/ww/en/ps/15667/man>)

Index

A

Article number, 3

C

Configuration limits, 13
CPU firmware version, 15
Cross-references (PDF), 4

D

Dimensions, 28, 42
Disposal, 6
Downloading project data, 30, 34

F

Firmware version, 3
Firmware, version, 15

G

Glossary, 7

H

Hardware version, 3

O

Operating states, 18

P

PROFINET IO devices, 13

R

Recycling, 6
Replacing a module, 39
Resources, 13

S

Safety notices, 23
Security, 3
Service & Support, 7
SIMATIC NET glossary, 7
STEP 7 version, 15
SYNC / FREEZE, 12

T

Training, 7

U

Uninstalling, 31